



Packaging Instructions and Decal Placement

D058-677-012

Apply label D2729-1 & D2728-1 as per drawing below.

Wrap step in plastic, tape bagged hardware kit to the middle of the step. Put 2 MF166 at each end of the box with glue, then 3 MF4612D on at each end of the step and one in the middle. Place step in box. Put the tops of MF4612D on bottom portions. Close box, apply Dart tape on top of box, starting with the first complete word of Dart. Strap after every second Dart. Tape over straps with clear tape. Staple both ends of box. Seal box and apply D2729-3 at top left hand corners. Apply label D2729-3 as per instructions in QSI 014 section 4.5.

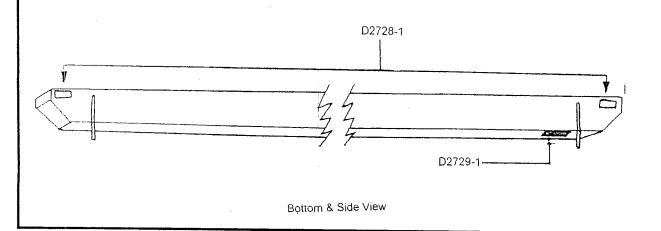

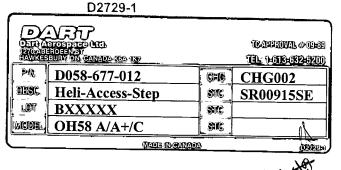

Revision: & C
Date: 01.11.07 01.06.26

H:\Admin-qa\iso\forms\PPP-1.Rev.A

D2729-3

